

Stargate Pyramids - Installation Instructions

Thank you for your purchase of a Stargate Pyramid, we are EXCITED for you!

PLEASE READ ALL OF THESE INSTRUCTIONS BEFORE PROCEEDING TO ASSEMBLE YOUR PYRAMID.



Contents

Your pyramid will comprise the following components:

4 x short pieces of pipe used for the base of the pyramid (shown on the right side of the photo). If you purchased your pyramid with the quartz sand enhancement, these pieces will be heavier and also contain corks in each end.

4 x long pieces of pipe with external couplings attached on one end (the middle set of pipes in the photo). These pipes will form the bottom piece of each vertical side of the pyramid. (Please note - the 3ft minipyramids do not contain this piece).

4 x pieces of pipe, each with a dome cap and a hole just under the dome cap. These 4 poles are loosely connected together at the top with a zip-tie (The "top pole assembly" - shown on the left of the photo). The Top Assembly will form the top piece of each vertical side of the pyramid (or the entirety of the vertical side for a 3ft mini-pyramid).

4 x Corner Assemblies consisting of two 45° connectors with a slip T in the middle (shown on top of the pipes in the middle of the photo)

1 x extra zip-tie

Installation

Step 1: Position the Corner Assemblies

Place the four Corner Assemblies at their approximate location on the floor as shown below:



Step 2: Insert the Base Pipes

Connect the four pieces of base pipe into the appropriate Corner Assembly. It only takes a minute and when finished the base of your pyramid should look like the photo to the right:



Step 3: Install Bottom Vertical Pieces



Connect the 4 pieces of pipe with external couplings into the slip tee in the middle of each Corner Assembly and let them lie down flat on the ground. It is easier if you insert pipes into two opposing corners first. Note - If you purchased a 3ft mini-pyramid, skip to Step 4.

Your pyramid should now look like the photo to the left.

Step 4: Install Two Opposing Corners of the Top Assembly



NOTE - WHILE PERFORMING STEPS 4 AND 5, DO NOT PUSH THE PIECES OF THE TOP ASSEMBLY TIGHTLY INTO THE EXTERNAL COUPLING AT THIS TIME. ONLY APPLY ENOUGH PRESSURE TO KEEP THEM FROM FALLING APART. WE WILL TIGHTEN THESE CONNECTIONS LATER AFTER POSITIONING THE TOP ASSEMBLY AND TIGHTENING THE ZIP-TIE (Step 6).

Insert the bottom of two opposing pieces of the Top Assembly into the External Coupling of the appropriate bottom vertical pieces. Assembling two opposing sides first will allow the partially completed assembly to stand up on its own while you reach to pick up and insert the two remaining vertical pipes into the Top Assembly. Your partially completed installation will look like the photo to the left.

If you purchased a 3ft mini-pyramid, connect each piece of the Top Assembly directly into the slip tee in the middle of each Corner Assembly.

Step 5: Install Remaining Two Sides of the Top Assembly




Pick up the two remaining bottom vertical pieces and attach them via the External Coupling to the two remaining pieces of the Top Assembly. Your pyramid should now look like the photo to the left.

Step 6: Adjust and Tighten the Top Assembly Zip-Tie

Top View

Before tightening up the zip-tie, line up the drilled zip-tie holes on each pipe by twisting them so they are as close as possible to the corresponding hole in the adjacent pipe (see diagram to the right).

USE GENTLE MOTIONS TO BRING EACH PIPE INTO ITS PROPER POSITION.

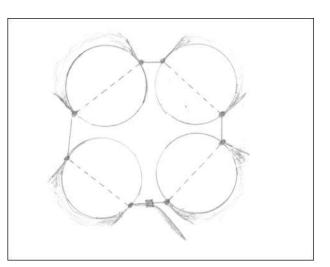

Once the pipes are in their proper position, slowly pull on the zip-tie to tighten it until the four vertical pieces are touching each other at the top. Cut off the remaining piece of the zip-tie with scissors.

Your completed top assembly should look like the photo below



You may now firmly secure the bottom end of each piece of the top assembly into its external coupling (middle joints).

Note – it is now worth making sure all of the pipes are sitting tight in their sockets as this will guarantee the sacred geometric shape the pyramid has been built to reflect.

Custom Capstone



If you purchased a custom capstone, you may attach it to your pyramid by simply cutting the zip-tie with scissors and removing it prior to inserting the vertical pieces into the holes in the custom capstone. It is also recommended that you remove the dome caps from the top of the vertical pieces to achieve the best fit. If you later decide not to use your custom capstone, or if your original zip-tie

breaks, simply reattach the four vertical pieces with the additional zip-tie provided.

For safety it is best to remove the custom capstone prior to moving the pyramid.



Orient Your Pyramid to Magnetic North

Orienting your pyramid to magnetic north greatly enhances its effectiveness. For assistance, go to our YouTube page "Pyramid Science Foundation". Under the section "How To Videos" on the Home Page is a video entitled "How to Orient Your Stargate Pyramid to Magnetic North".

Maintenance

A periodic cleaning with mild soap and warm water should keep your pyramid looking great for years to come. You can also use isopropyl (rubbing) alcohol for tougher marks or lines on the surface of the pyramid.

Do you have any QUESTIONS?

For more information and instructions see my "How to" videos and Pyramid FAQ section. If you have watched the videos and have read the FAQ's and still have questions, please feel free to contact me.



Contact Email – <u>paul@paulbarlowenergy.com</u> Web – paulbarlowenergy.com